

The Fire Denyer automatically shuts off power to your kitchen stove and appliances when smoke is detected due to unattended cooking, (being distracted by your phone, or kids etc.) and alerts all of your home with the interconnected hard wire smoke alarms.

To turn off the smoke alarm noise, you simply push the 'Hush Button' which can be conveniently located at any height on the wall so that it can be reached by those in a wheelchair. This device can also come with flashing light & bed shaker alerters for the deaf/hearing impaired.

<https://www.firepreventors.co.nz>

Melissa Thomas
Ph 027 297 2859
melissa@firepreventors.co.nz

